


EXHIBIT H


McCune v. Graco Children's Products, Inc., et al.

2005 Explorer Sport Trac
Restraint Control Module Removal Protocol


1. Depower the system.
 - a. Disconnect the battery ground cable and wait at least 1 minute.
2. Remove the center console.
 - a. Remove the floor console tray by applying slight inward pressure when lifting at the rear.

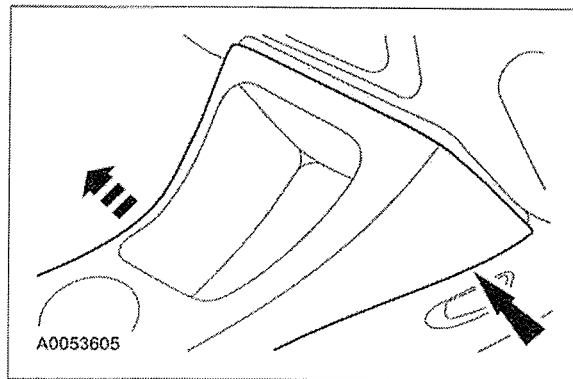


- b. Disconnect the floor console electrical connectors.

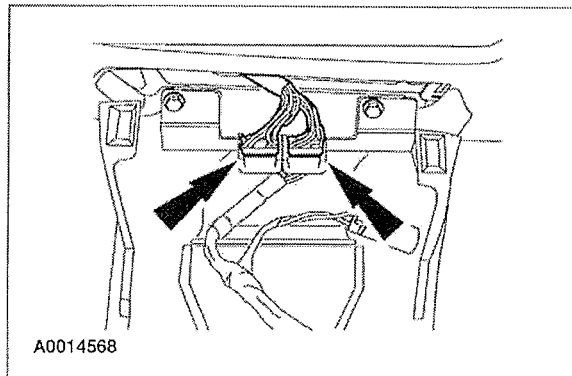


- c. Remove the floor console front bolts.

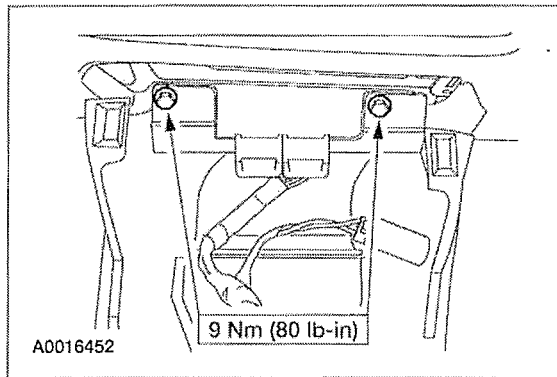

- d. Remove the floor console center bolts.

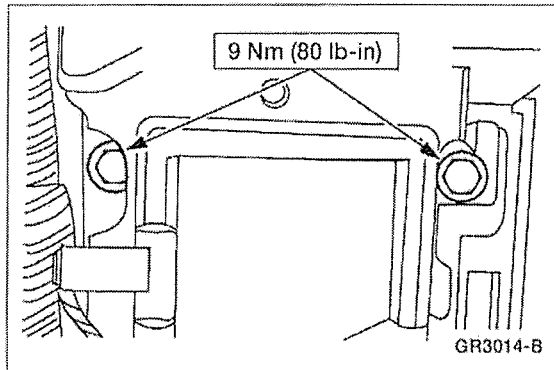


- e. Move the console rearward to disengage the rear mounting bracket.

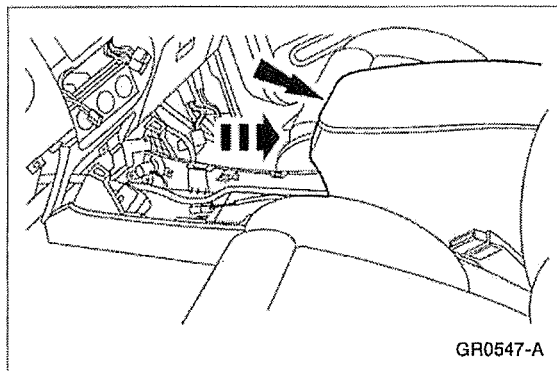


- Note: If the front floor pan in the tunnel area is deformed, it may be necessary to cut off the forward portion of the console to expose the RCM.

- f. Remove floor console.


3. Disconnect the large RCM electrical connector.
 - a. Pinch the thumb tab and pivot the connector position assurance lever away from the RCM, disengaging the lever.
 - b. Pull out and disconnect the large RCM electrical connector.

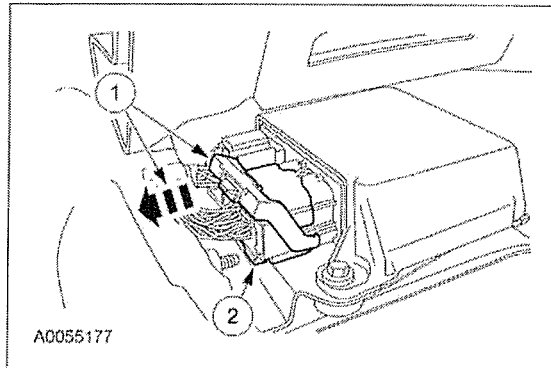

4. Disconnect the small RCM electrical connector.
 - a. Push down and release the retaining tab and disconnect the small RCM connector.
 - b. Remove the bolt.

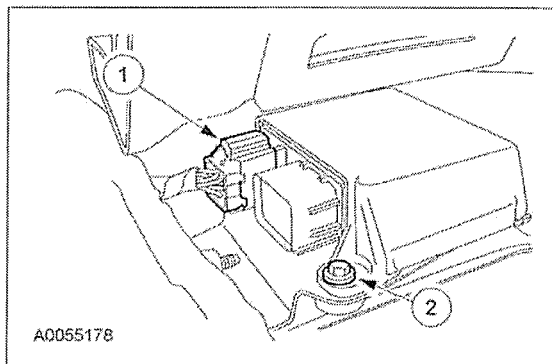

5. Remove the RCM.
 - a. Remove the (2) remaining bolts.
 - b. Remove the RCM

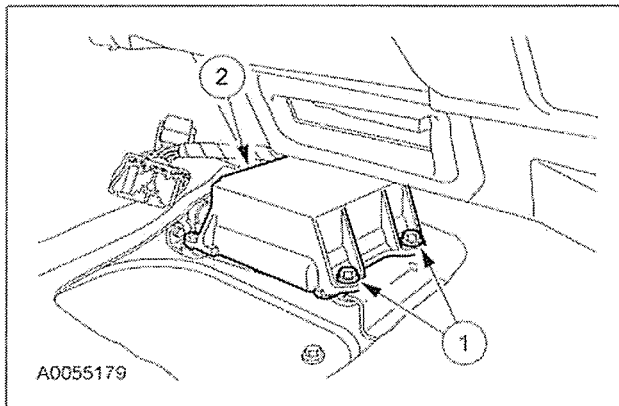

Note: Each step will be photo documented and a chain of custody established for the module.